



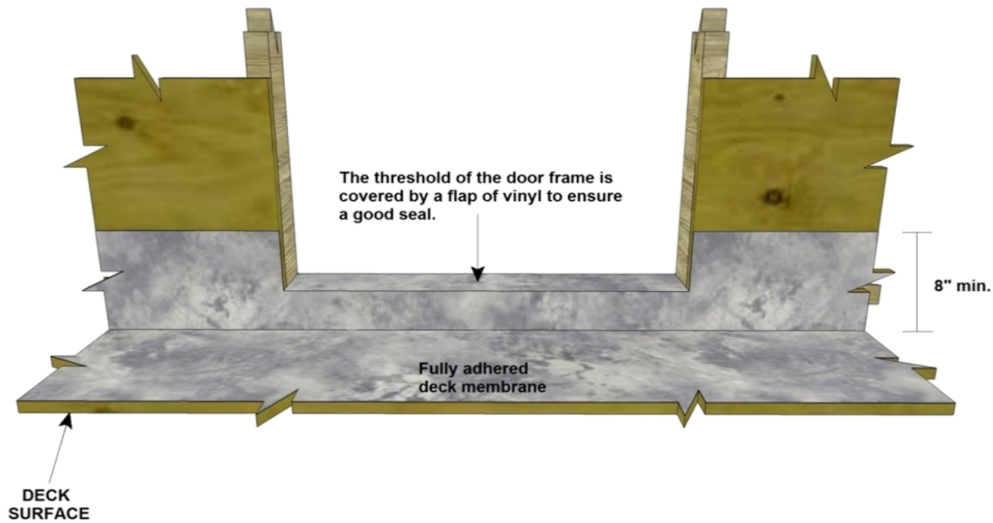

CORNER PATCH AND FLASHING

Height from the door threshold to the top of the membrane flashing.

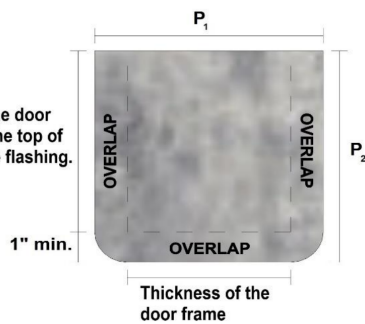


$$P_1 = \text{Thickness} + (1" \text{ Overlap} \times 2)$$

$$P_2 = \text{Height} + 1" \text{ Overlap}$$

Adhere a vinyl patch to the two bottom corners of the door frame and hot-air weld it to the deck membrane. Each patch overlaps the sides of the door frame 1 inch.

Use ZIP Tape (or similar) or a termination bar at the top of the membrane. If the termination bar will be covered with siding, no caulk is required.

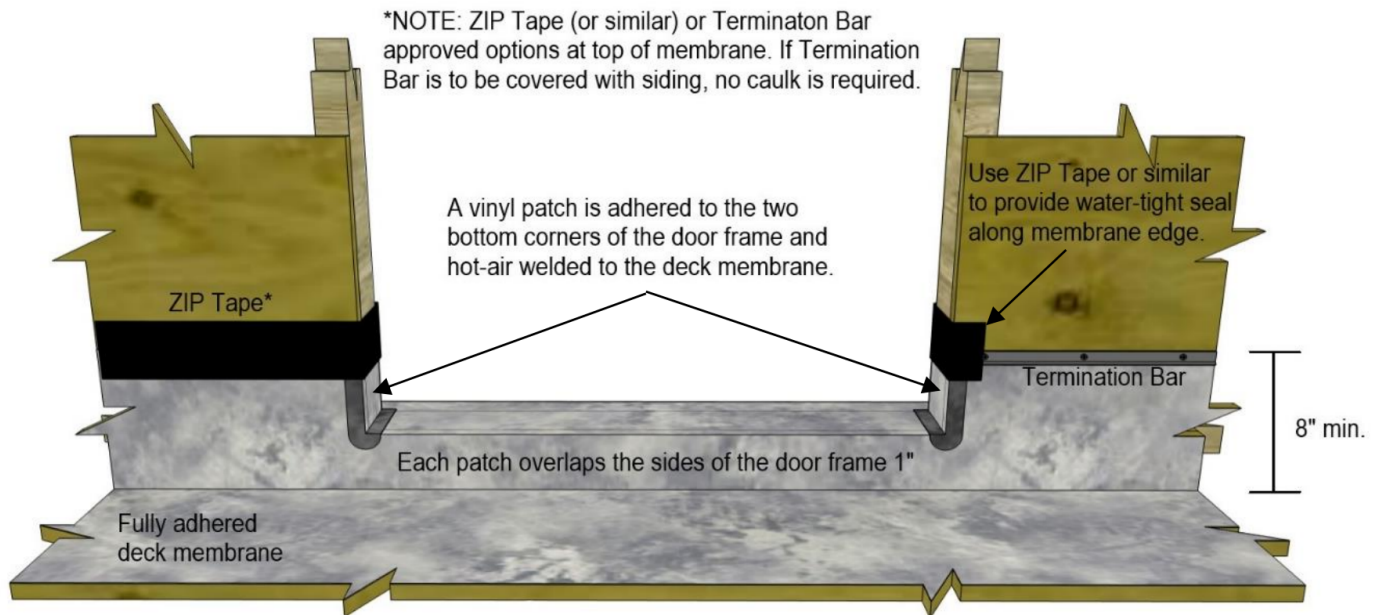

3912 E. Progress, North Little Rock, AR. 72114 Phone: (888) 450-3325

DETAIL NO.:

DR-117

DRAWING TITLE:

**DOOR THRESHOLD
DETAIL**

UPDATED:

10/20/2026

SYSTEM:

FULLY ADHERED